


Type the Phone Number you want sent informations

Specify the message you want with parameter [lat],[long]


Enable this option to receive SMS messages

Enable this to receive phone calls after each accident

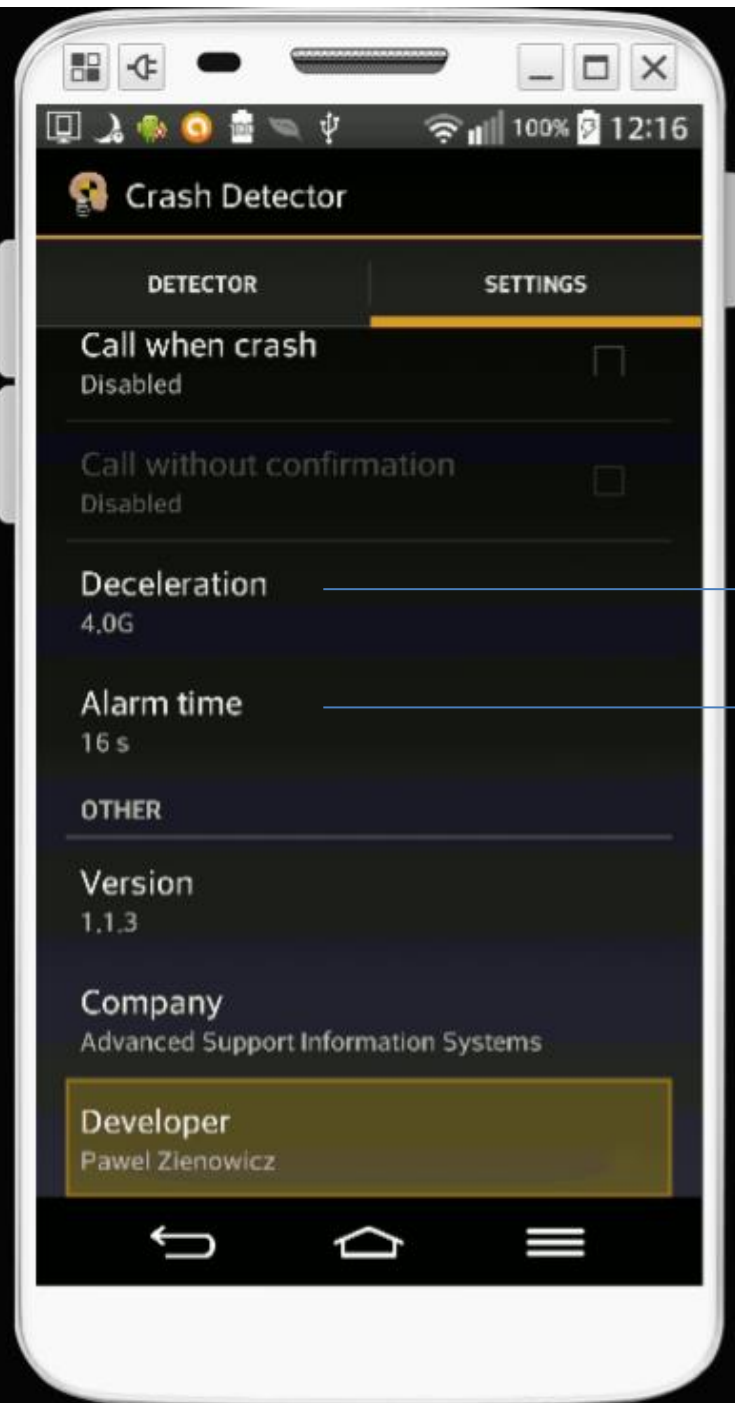

Specify the value of the crash
Tip : 4- 5 G is enough

Type the time of waiting before user cancel
fault alarm
Tip : 16 – 30s is enough

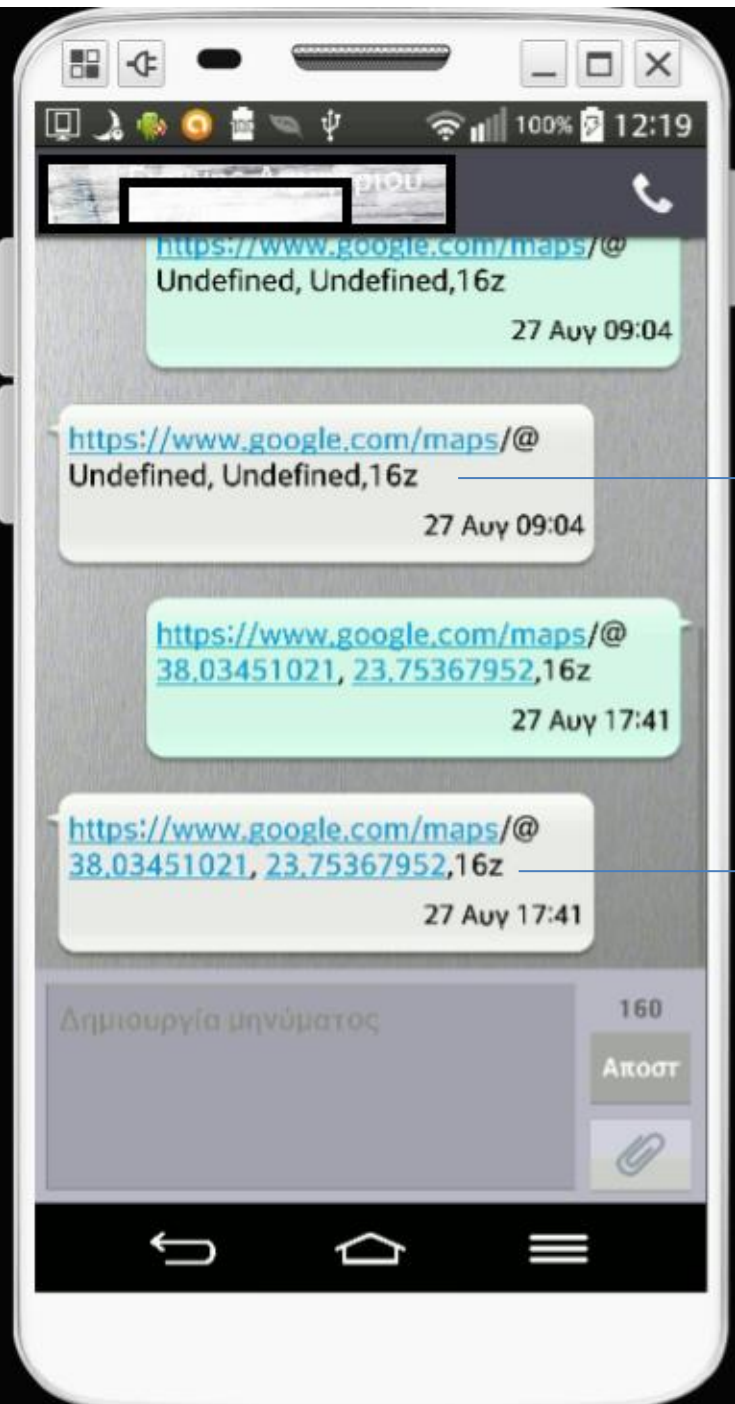


Enable the GPS to Receive correct value

You receive message with your format



Type or paste the [lat] , [long] from your SMS message

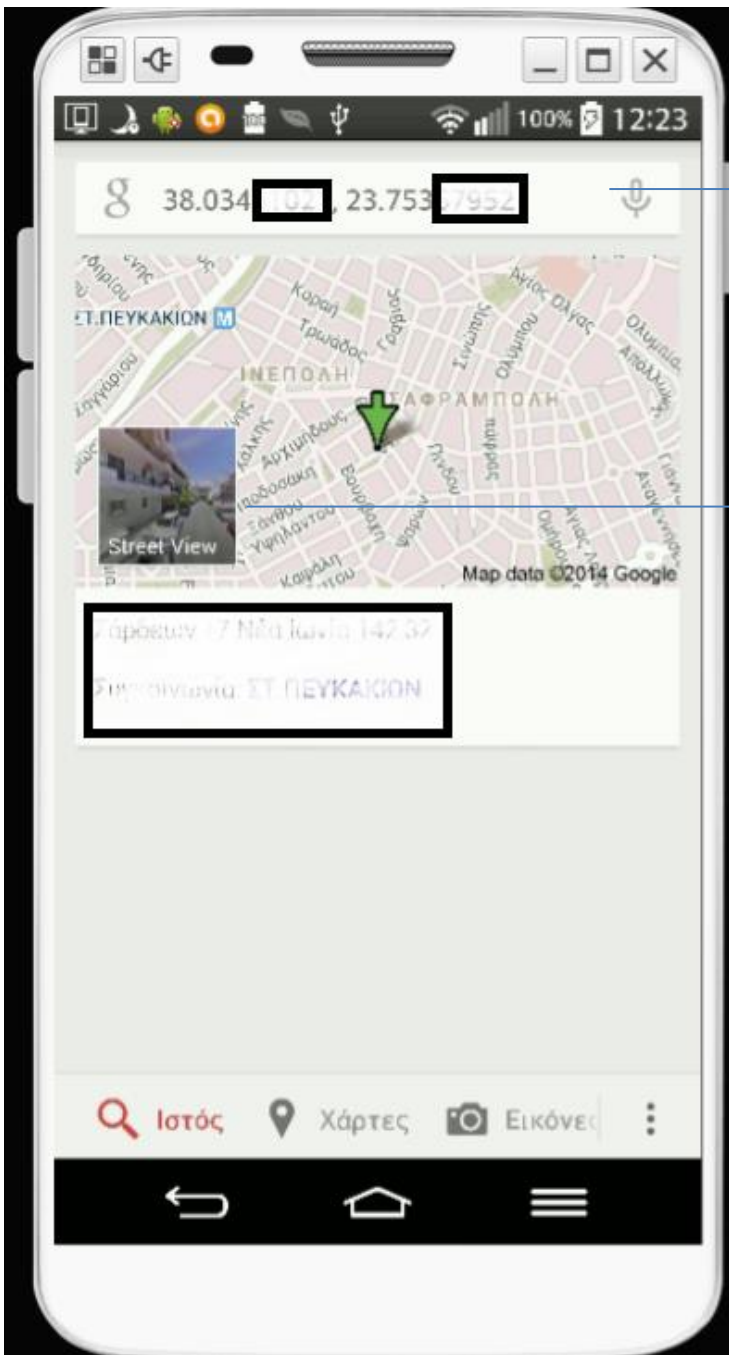

Type or paste the [lat] , [long] from your SMS message

Press the Photo link and navigate via google street view



See exactly the area of the alarm